

WESTCOTT  
Since 1872™

TITANIUM  
BONDED®  
**iPoint orbit**  
ELECTRIC PENCIL SHARPENER

**1 YEAR WARRANTY**

Should you have any problems with your iPoint sharpener within the period of the warranty we will replace it free of charge. The cutter parts are under warranty for a period of 12 months, all other parts 90 days from date of purchase. To arrange your replacement, while under warranty, send to Customer service Dept., Acme United Corporation, 55 Walls Drive, Fairfield, CT 06824. Send dated Proof of Purchase and an explanation of the defect. Damage due to abuse, misuse, normal wear, industrial use or neglect will not be covered. You may have other rights that vary from state to state.

**model 16059**

Electrical Specs  
120 Volts, 60 Hz

Acme United Corporation, 60 Round Hill Road, Fairfield, CT 06824  
Westcott®, Titanium Bonded® and iPoint® are registered trademarks of Acme United Corporation.  
© 2014 Acme United Corporation  
Patents Pending | Designed in the USA | Made in China



TITANIUM  
BONDED®  
**iPoint orbit**  
ELECTRIC PENCIL SHARPENER


model 16059

TITANIUM  
BONDED®  
**iPoint orbit**  
ELECTRIC PENCIL SHARPENER

**USING THE SHARPENER**


Connect the adapter at the rear of the sharpener as shown.

Place the pencil in the opening and push lightly, once the perfect point has been reached the auto stop will automatically shut off the power. Remove the pencil.

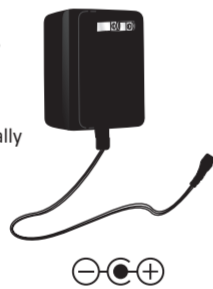

**EMPTYING THE SHAVINGS RESERVOIR**

For your safety be sure to unplug your sharpener before emptying the shavings reservoir. Turn the top of the reservoir counter-clockwise as shown, lift off the lid and empty the shavings directly into the trash. The entire shavings reservoir can also be removed if needed for easier cleaning. Just lift gently off of the base once lid has been removed. Replace in exact same position on base for a perfect fit. Replace the lid of the reservoir before operating.

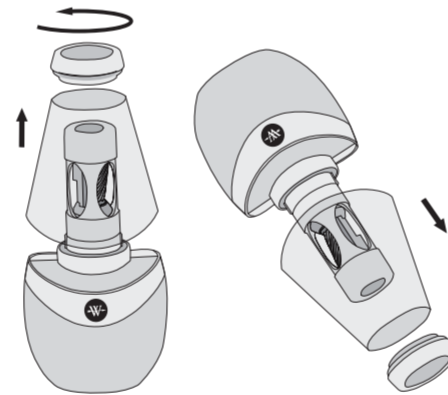

**GENERAL INSTRUCTIONS**

- To guarantee optimum performance from your sharpener empty on a regular basis.
- Your sharpener is not designed for use with chalk, crayons or thick wax pencils. Using your sharpener with these products will clog up the blades.
- If your sharpener blades become clogged, unplug and then use a dry cloth to remove any debris (The blades are very sharp, so take great care during this operation). If there is difficulty in removing all the debris, use a blunt object (such as a paper clip) to remove.
- DO NOT SPRAY/USE ANY CLEANERS/GREASE etc.
- For your safety unplug your sharpener before emptying the shavings reservoir.
- Keep out of reach of small children.

**NOT INTENDED FOR USE ON FINE SURFACES**

**PRINTING SPECIFICATIONS**

**FILE NAME:** 16059\_iPointOrbit\_InstructionManual.pdf  
**DATE:** 10/17/14  
**ITEM NUMBER:** 16059  
**DESIGNER:** KP

**SIZE: 12" x 4"**

 Acme United Corporation

**NOTES**  
05/08/14 Approved by MJ  
10/17/14 Address updated by LA

**PRINTS:**



**PRINTERS NOTES**

**DIE  
LINE  
DO NOT  
PRINT**

**CALL  
OUTS  
DO NOT  
PRINT**



Kirsten Paidiris  
2708 Kinsington Circle  
Weston, FL 33332  
954.235.6058  
studiokdesign1@mac.com

**NOTE:** Please refer to PANTONE MATCHING SYSTEM swatch books for accurate color representation.  
**LAYERS MARKED:** DIE LINES or FPO-DO NOT PRINT **PRODUCT & OUTLINES** shown for placement only