




ROTARY TRIMMER BLADES:

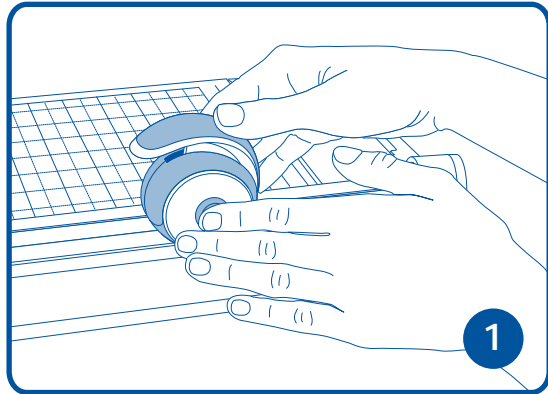

To remove the blade, push the button in the center of the blade cartridge

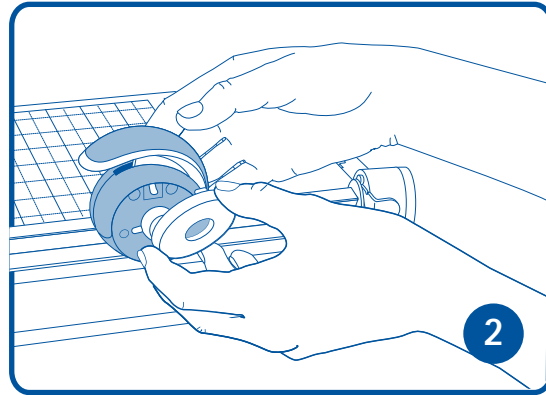

Grasp the edges of the cartridge and pull straight out

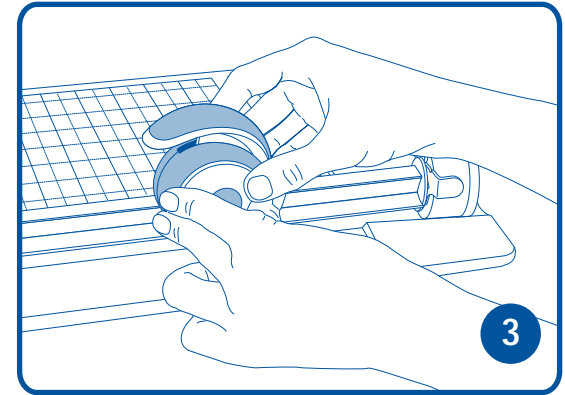

To add a new blade, simply push the cartridge into place until you hear a "click"