


WESTCOTT®

iPoint
évolution Axis

MODEL: 15509

Electric Pencil Sharpener

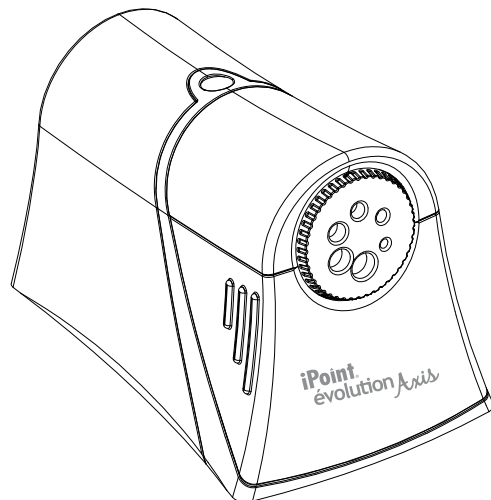

Electrical Specifications
120Volts,60Hz,1.0Amps



Congratulations on your purchase of the Westcott iPoint Curve Axis Pencil Sharpener! We know that you will enjoy its wonderful design, and great performance, that will give you years of use.

How to use your iPoint

- Insert the plug into the nearest power outlet.
- To operate, simply place your pencil into the opening. The sharpener will start automatically.
- The pencil will begin to sharpen as you push the pencil into the opening. Once the pencil is sharpened to the perfect point, the Auto Stop Technology feature will shut the sharpener off.
NOTE: Motor will shut off when the pencil is fully sharpened.
- To remove the shavings simply pull out the reservoir, empty the shavings in the trash and carefully slide the shavings reservoir back into place.

Special features

- Will not operate if receptacle is removed
- Auto-Reset motor shut-off prevents overloading due to improper use
- Non-skid feet hold the sharpener securely on any surface.
- Adjustable rotary pencil guide for 6 pencil sizes up to 11mm diameter.

Maintenance & Safety

- Make sure the shavings reservoir is pushed all the way in before operating the sharpener. It will not operate unless it is placed correctly. This is a safety feature to make sure you do not cut yourself on the sharp blades.
- Please make sure to remove the shavings on a regular basis, as not to damage the sharpener.
- Always unplug the sharpener while cleaning.
- This sharpener is not designed to be used with crayons, chalk or soft waxy pencils. These types of materials will clog up the blades over time.
- If the blades do become clogged and you attempt to clean them, please follow these instructions:
 - o Unplug the sharpener from the outlet.
 - o Remove the shavings reservoir.
 - o Clean blades by using a dry cloth to remove residue. If any residue is stuck on the blades you can use something blunt, such as a paper clip to remove. Do not use grease or oil on the blades. Do not use abrasive cleaners.
- Never pull at the cord to turn the product off, this will damage wiring over time.
- As with any electrical appliance, please keep out of the reach of small children.

名称:15509说明书

规格:150*150mm

材质:80g普通纸单色双面印